


Installation of Obie Link Guard to Skid Plates that utilize the frames that have mounting tabs

Part # OLG-YAMWR250FX-15-STK Fits: YZ 250F & YZ 450F (2010 -2013)WR 250 F & YZ 250 FX (2015)

Part # OLG-YAMWR450F-12-STK WR 450 F Fits: WR 450F (2012 – 2015)

Part # OLG-YAMYZ250450-06-STK Fits: YZ 250F & YZ 450F (2006 – 2009) – WR 250F & WR 450F (2007 – 2009)

The Yamaha Obie Link Guard fits between the frame rails thus keeping the link guard from getting twisted sideways, away from the linkage. A longer bolt is supplied for easier installation. Always mount the Obie Link Guard between the frame and your skid plate for a smooth transition from skid plate to link guard

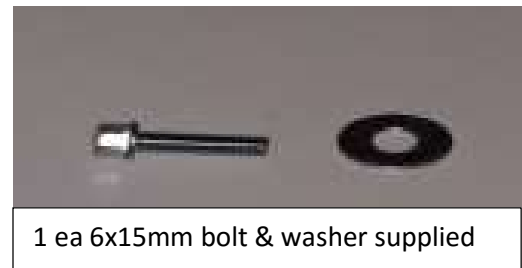

Installation of Obie Link Guard to Skid Plates that require some modification YZ 125 - 250 – YZ250F – 450F

Part # OLG-YAMYZ125450-05-UNI Fits: YZ125 – YZ250 (2005 – 2015) YZ250F – YZ450F (2010 – 2013)



Most skid plates have a hole or holes for quick installation. Just insert the Obie Link Guard between the bottom of the frame and your skid plate making sure that the curled end (by the linkage rocker) sticks out approximately 2 inches past the bottom link. Then use a permanent marker and mark the guard for drilling. If there are no holes in your skid plate, it may be necessary to drill in both skid plate and the Obie Link Guard for installation (the Yamaha Obie Link Guard fits between the frame rails thus keeping the link guard from getting twisted sideways, away from the linkage). Bolt or pop rivet the Link Guard to the skid plate (hardware not provided). Always mount the Obie Link Guard between the frame and your skid plate for a smooth transition from skid plate to link guard.

For further mounting instructions go to www.obielinkguard.com and check out our universal mounting instruction video or call Mark "Obie" (208) 949-7299